 


Get started with your GX Plus

Use this checklist to explore all of the features of the GX Plus

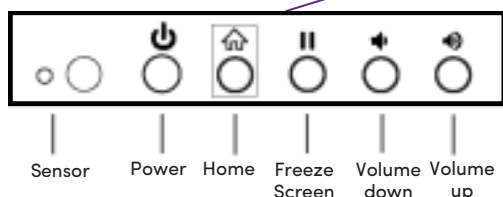


Explore the Display

- ☐ Locate the **Power** button on the front control panel.
- ☐ Use the **Volume** buttons on the front panel.
- ☐ Tap **Freeze** to pause the screen (great for discussions!).
- ☐ Tap the **Home** on the front control panel to quickly return to the homescreen.



Side Toolbar

- ☐ Tap the **Side Toolbar** buttons on either side of the screen to open the toolbar.
- ☐ Tap the **Widgets** menu to view all of the available widgets
- ☐ Tap the **Clean Up** feature to log out of all browser sessions, & close apps.

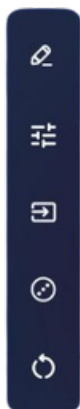


Tip: Tap the screen if the side toolbar buttons aren't displayed.



Connect your computer

- ☐ Connect a computer to your display using both an **HDMI cable** and, to enable touch, a **USB cable**.

Or use a single **USB-C cable** for both video and touch.

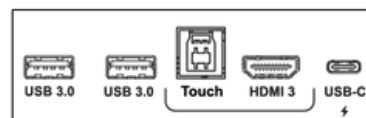

- ☐ Press the **Input** icon  on the home screen, then tap the computer's input menu option.
- ☐ **Interact** with any computer file on your SMART interactive display using **SMART Notebook** or **SMART Ink**.

Get started with your GX Plus



Whiteboard

Tap the Whiteboard icon on the Home screen to open a new whiteboard

- ☐ Tap the **Select tool** to move, resize, rotate, delete, or layer objects
- ☐ Click the **page numbers** to interact with all of the pages (rearrange, delete, add)
- ☐ Add new pages with the **Add Page tool**
- ☐ Use **pinch-to-zoom** (two fingers) to zoom in and out




Customize the Background

- ☐ Tap the **Menu > Theme** icon
- ☐ Choose a **template** (lined, graph, etc.)
- ☐ **Set or upload** a background image
- ☐ Change the **background color**



Write, Draw & Erase

- ☐ Use the **Pen tool** to write or draw with your finger or pen.
- ☐ Tap the pen again to **change color or style**.
- ☐ Enable **multi-finger writing** in **Settings** to write with two pens simultaneously.
- ☐ Use the **Eraser** to remove ink

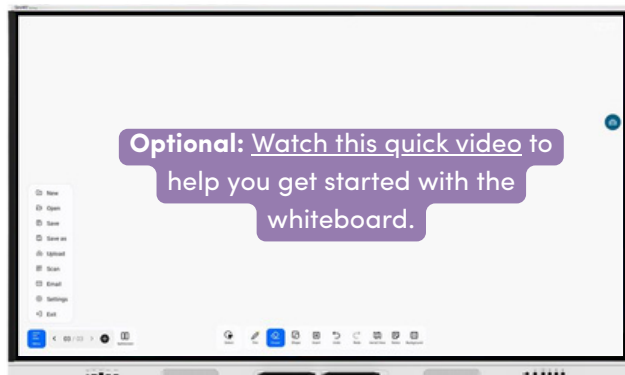

Import Files & Interactive Elements

- ☐ Use **Import** to add images, PDFs, or .svg/.iwb files into the whiteboard
- ☐ Tap **More** to add a variety of elements
- ☐ Add rulers, shapes, and tables, Mind maps, and Interactive teaching visuals



Open, Save, & Share Whiteboards

- ☐ Open saved whiteboards from the display, USB, or cloud via **Menu > Open**
- ☐ Use **Save or Save As** to store your session or rename it.
- ☐ **Export** as .png or .pdf for easy sharing.
- ☐ Use the **QR Code** icon to share a static image of your whiteboard

Get started with your GX Plus



Widgets and Tools


✓ Check them off as you try each one!

- | | |
|--|---|
| ☐ Overlay – Write over any screen, save your ink as an image. | ☐ PIP – View another input source in a floating window. |
| ☐ Timer – Set a countdown with an optional alarm. | ☐ Screen Lock – Set a PIN or password to secure the screen. |
| ☐ Stopwatch – Measure elapsed time with lap feature. | ☐ Calculator – Quick access to an onscreen calculator. |
| ☐ Spotlight – Focus attention on part of the screen. | ☐ Screen Capture – Capture a window or the full screen. |
| ☐ Record – Record your screen activity with optional settings. | ☐ VoteKit – Launch student response activities. |
| ☐ Freeze – Pause the screen image; zoom in/out while frozen. | ☐ Easy upload – Quickly share files from a mobile device to the display |



Using Overlay

- | | |
|--|--|
| ☐ Tap the Overlay icon to activate the tool | ☐ Tap the Save icon to save your overlay as a local file to the display |
| ☐ Use your finger or pen to write on the screen with digital ink using the Pen tool. | ☐ Tap History to view and edit previously saved versions of the current overlay. |
| ☐ Use your palm or fist to erase ink manually | ☐ Tap the Close icon to exit and remove the overlay |
| ☐ Tap Select to interact with the screen beneath the overlay | |

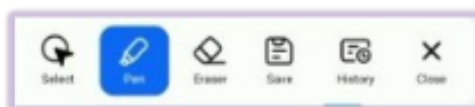

Get started with your GX Plus

Launcher

- ☐ Swipe up from the bottom of the screen to access the **Launcher**.
- ☐ Tap the **Home** icon to return to the Home screen.
- ☐ Tap **Recents** to switch between open apps.
- ☐ Tap **All Apps** to open the full app menu.

Home Back Recents All Apps



File Manager

- ☐ Tap **All Apps**
- ☐ Tap the **File Manager** icon
- ☐ Open a saved **whiteboard files** (.enb)

Sign in to Google


- ☐ Sign in to access your **Google Drive**, **Google apps**, and the **Play Store**.
- ☐ Tap the **Settings** icon on the Home screen
- ☐ Tap **Google Sign In** and enter your credentials

Apps

- ☐ Tap the **"Google Play Store"** icon to launch
- ☐ **Search** for an education app of your choice
- ☐ Tap to **download**

SMART Mirror

- ☐ Tap the purple **SMART Mirror** icon on the display to launch the application
- ☐ Open the browser on your laptop and **enter smartmirror.link**
- ☐ **Enter the code** from the panel to the smartmirror.link tab; enter your name
- ☐ On the board, **select your name** to be invited to present; follow the prompts to present your content

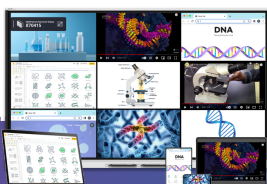

Lumio™

- ☐ Tap the yellow **Lumio** icon on the display to launch the application
- ☐ **Sign-in** to Lumio using your Google or Microsoft account
- ☐ Explore the **Lumio Library**, search for an existing resource, and save to your library
- ☐ **"Mash-Up"** existing resources by importing a PDF, Google Slides, PowerPoint, or SMART Notebook file you already have

